

This Information Is Provided By
CBTricks.com

How to install the Powerband RFX75
on Cobra 29 series radios. Instruction Version 2.

Liability of damages to any equipment is the sole responsibility of the user!
Downloading, viewing, or using any information provided on these pages
automatically accepts the user to the terms of this agreement!
Modifications are provided for information purposes only!
Supporters of CBTricks.com paid for the hosting so you would have this file.

CBTricks.com is a non-commercial personal website was created to help promote the exchange of service, modification, technically oriented information, and historical information aimed at the Citizens Band, GMRS (CB "A" Band), MURS, Amateur Radios and RF Amps.

CBTricks.com is not sponsored by or connected to any Retailer, Radio, Antenna Manufacturer or Amp Manufacturer, or affiliated with any site links shown in the links database. The use of product or company names on my web site is not endorsement of that product or company.

The site is supported with donations from users, friends and selling of the Site Supporters DVD's to cover some of the costs of having this website on the Internet instead of relying on banner ads, pop-up ads, commercial links, etc. Thus I do not accept advertising banners or pop-up/pop-under advertising or other marketing/sales links or gimmicks on my website.

All the money from donations is used for CBTricks.com I didn't do all the work to make money (I have a day job). This work was not done for someone else to make money also, for example the eBay CB sellers.

All Trademarks, Logos, and Brand Names are the property of their respective owners.
This information is not provided by, or affiliated in any way with any radio or antenna Manufacturers.

Thank you for any support you can give.

For information on how to Support CBTricks.com
<http://www.cbtricks.com/support/>

The user is solely responsible for making sure that any modifications made to the radio unit must meet all Federal and State Regulations or the Country of use! Liability of damages to any equipment is the sole responsibility of the user! Downloading, viewing, or using any information provided on these pages automatically accepts the user to the terms of this agreement! Modifications are provided for information purposes only! Disclaimer: CBTricks.com does not warrant the accuracy of the information contained herein nor is it responsible for any errors or omissions and assumes no liability for the content on this site. While CBTricks.com uses reasonable efforts to include accurate and up to date information, CBTricks.com makes no warranties or representations as to its accuracy or timeliness and assumes no liability or responsibility for any errors or omissions in the content of this site.

RFX75 – Cobra 29 Installation


1. Locate the capacitor at C10 on the RFX75 and carefully cut it off the board.
2. Cut the Yellow and Blue wires off the RFX75 board.
3. Cut the RX OUT coax cable off the RFX75 board. Take care to cut it close enough to the PCB so that it does not short out on anything.
4. Drill and mount the RFX75 on the back of the radio using the supplied hardware.
5. From the radio, remove C8 (keep part for later use), C53, C57, R56, L12, and the final transistor.
6. Route the RF IN coax through the hole where the final transistor was so that it can easily be soldered to the solder side of the radio PCB. Solder the coax center conductor to the front hole of R123 and the coax shield to DC ground.
7. Solder the Red and Black wires to the back of the DC power jack (observe polarity!).
8. Solder the Orange wire to the front side of L15.
9. Solder the RF OUT coax center conductor to the rear hole of L12. Solder the coax shield to the chassis ground tab on the back of the radio's antenna connector.
10. Using the 15pF capacitor that was removed from C8, solder one end to JP24 and the other end to the rear hole of L12 on the solder side of the board. Make sure to insulate the leads. You will probably have to lengthen the leads of this part to make it fit. This re-connects the RX circuit in the radio.
11. Add a short jumper wire from the ground area at R142 over to the audio transformer's ground pad. This eliminates a ground loop that can cause the radio to squeal on transmit.
12. In the radio, replace R48 with a 470K ohm, ¼ watt resistor.
13. In the radio, replace C42 with a 3300µf, 16volt electrolytic capacitor.
14. Retune the transmit and receive of radio for best performance. **IMPORTANT:** If the carrier is higher than 15 watts you should take the following steps to reduce the carrier to below 15 watts.
 - a. After confirming that the radio is functioning properly, remove JP36 and install a 1000µF electrolytic capacitor in its place with the negative lead in the rear hole and the positive lead in the front hole.
 - b. On the solder side of the radio's circuit board add a 10 ohm - 47 ohm, ¼ watt resistor across the two points where you installed the 1000µF capacitor. This will allow you to adjust the carrier - The higher the resistor value, the lower the carrier. Typically, 33 ohms is about right.

Additional Steps for Sound Tracker Models ONLY (to eliminate possible squeal on TX):

1. Locate wires at W201 and W202 where these wires are soldered to the main PCB (located near TR17).
2. Do not unsolder wire at W201. Cut wire at W201 so that approx. 1.50 inches of wire is extending from main PCB. Strip and solder tin the end of this wire coming from the PCB.
3. Unsolder wire from hole at W202.
4. Insert stripped and tinned wire from W201 into hole at W202 and solder in place.
5. Use heatshrink tubing to cover the cut ends of the remaining 2 wires so they do not short out on anything inside the radio.
6. This modification allows the Sound Tracker feature to work in RX mode only.

The user is solely responsible for making sure that any modifications made to the radio unit must meet all Federal and State Regulations or the Country of use! Liability of damages to any equipment is the sole responsibility of the user! Downloading, viewing, or using any information provided on these pages automatically accepts the user to the terms of this agreement! Modifications are provided for information purposes only! Disclaimer: CBTricks.com does not warrant the accuracy of the information contained herein nor is it responsible for any errors or omissions and assumes no liability for the content on this site. While CBTricks.com uses reasonable efforts to include accurate and up to date information, CBTricks.com makes no warranties or representations as to its accuracy or timeliness and assumes no liability or responsibility for any errors or omissions in the content of this site.

- JP36
- R56
- Final
- C8
- C57
- L12
- R142
- C42
- R48

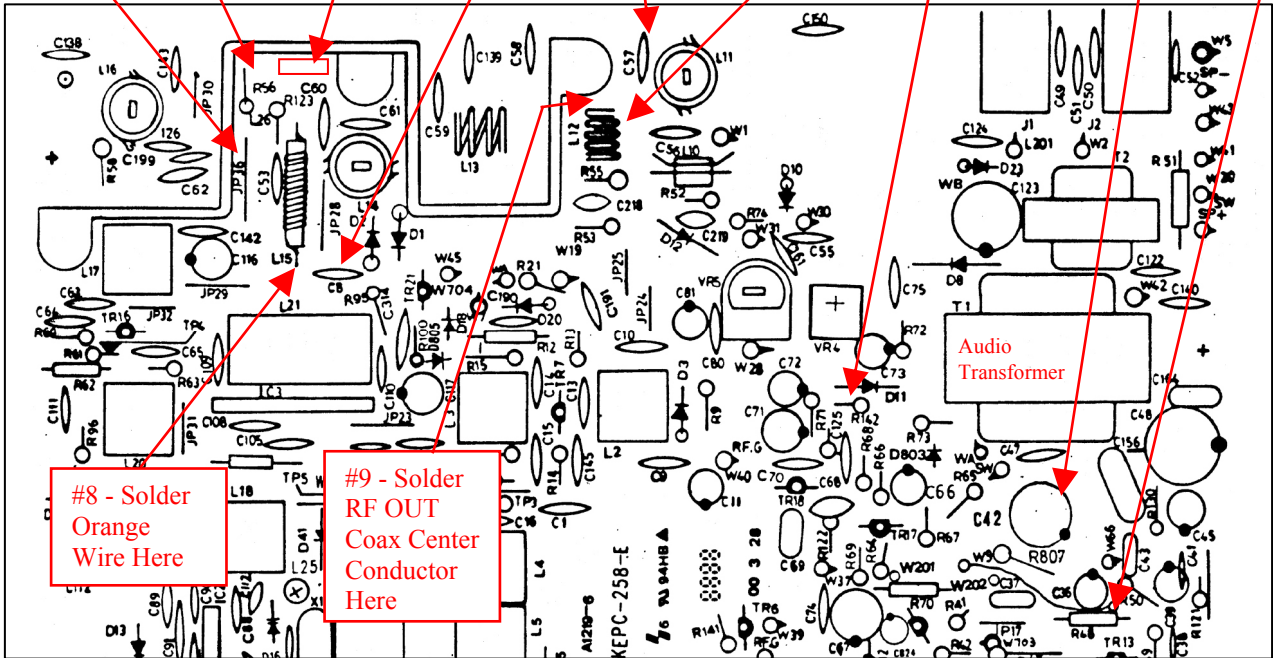

- #11 - Solder Jumper Wire Here
- #10 - Solder 15pF Capacitor from C8 Here
- #6 - Solder RF IN Coax Shield Conductor Here
- #6 - Solder RF IN Coax Center Conductor Here
- #14b - Solder 10-47 ohm Resistor Here



The user is solely responsible for making sure that any modifications made to the radio unit must meet all Federal and State Regulations or the Country of use! Liability of damages to any equipment is the sole responsibility of the user! Downloading, viewing, or using any information provided on these pages automatically accepts the user to the terms of this agreement! Modifications are provided for information purposes only! Disclaimer: CBTricks.com does not warrant the accuracy of the information contained herein nor is it responsible for any errors or omissions and assumes no liability for the content on this site. While CBTricks.com uses reasonable efforts to include accurate and up to date information, CBTricks.com makes no warranties or representations as to its accuracy or timeliness and assumes no liability or responsibility for any errors or omissions in the content of this site.